



# Endeavour<sup>®</sup> 5 Navigator

## Information Sheet

### *Wiring up to GPS and Auto-Pilot*

The configuration of the GPS and the Auto-Pilot within Endeavour 5 Navigator is covered in the User Guide (see the relevant sections in the chapter on VESSEL menu – I/O Configuration).

Many users of Endeavour will have the facility to connect the GPS and Autopilot to their machine.

A cable would consist of a female 9-pin connector on one end and four free wires on the other end. The female 9-pin connector should be plugged into the serial port on the computer. The wires should then be connected to your GPS and Auto-Pilot.

The colour coding of the wires is as follows:

Colour	DB9 Pin Number	Use
Red	2	GPS Receive
Blue	3	Auto-Pilot Transmit
Green	5	Signal Ground There are two signal ground wires, one for the GPS and one for the Auto-Pilot. They are both connected to the same pin

For the appropriate wires to connect to on the GPS and the Auto-Pilot see the respective manufacturer's manuals.

If required, a cable can be supplied. Please refer to our price list or send us an email at [sales@hsa.com.au](mailto:sales@hsa.com.au).

For more information contact:



[www.hsa.com.au](http://www.hsa.com.au)



+61-2-9957 3549